

Operating & Cleaning Instructions

Birko Commercial Steam Cooker

Fast steam cooking of dim sims, hot dogs, vegetables.

Key Features

Quality steam cooker for fast food and restaurant kitchens and canteens. Designed for rapid steaming of dim sims, hot dogs, chicken, vegetables. Indicator light shows power on, has simmerstat control for continuous steaming.

Welded stainless steel body and lid with stainless steel basket for easy cleaning.

Heat resistant lid knob, lifting handles and simmerstat control switch.

Read These Warnings First

Read all instructions before attempting to use this appliance.

Never touch heated surfaces. Use handles and knobs provided.

Exercise extreme caution when moving if filled with hot water.

Empty the appliance contents before attempting to lift or move it.

Never immerse the appliance, cord or plug in water or other liquid.

Not for use by young children or infirm people without supervision.

Always unplug from power when not in use and before cleaning.

Never operate appliance with a damaged power cord or plug.

Any damaged cord or plug must be replaced only by a Birko Service Provider or suitably qualified technician.

Do not use any accessories or attachments not supplied by Birko.

Do not allow cord to touch hot surfaces or hang over table or counter.

Never place the appliance on or near a hot burner or in a heated oven.

Always plug cord into power outlet before turning any controls on.

Always turn controls off before removing plug from power outlet.

Never use the appliance for any purpose other than its intended use.

Never overfill. Beware of scalding steam when lifting appliance lid.



Operating Instructions

Cover the heating element with at least 50 mm of cold water.

Place a slice of lemon in the water to help minimise corrosion from salt.

Arrange the food to be steamed in the removable stainless steel basket.

Place the basket inside the steam cooker and replace the lid.

Open the steam vent located below the lid knob, plug in and turn on.

Turn the dial to FULL to bring the water to the boil.

When steam emerges from vent, turn dial to required setting, close vent.

Steam contents for required time then turn the steam cooker OFF.

Disconnect steamer from power when not in use.

For best results, water level should be maintained at not less than 50 mm.

Cleaning Instructions

To maintain cooker's appearance, clean with hot soapy water after use.

Use a soft scrubbing brush to clean the basket and crevices if necessary.

After cleaning interior and basket, rinse with cold water and then dry.

Wipe exterior with a damp cloth then polish with a soft clean cloth.

Never immerse the base of the cooker in water or other liquids.

Key Specifications

MODEL	SC1
Capacity(dim sims)	50-60
Heating element (watts)	1000
Supply voltage (volts)	220-240
Height (mm)	300
Diameter (mm)	310
Nett Weight (kg)	2.9

Operating & Cleaning Instructions

Birko Commercial Steam Cooker

Warranty Information

The Birko appliance you have chosen is precision-built from the finest materials available and should give many years of trouble free service.

Birko Heaters Australia Pty Ltd warrants that, should any part fail within 12 calendar months of installation, that part will be repaired or replaced free of charge by Birko or its Distributor or Service Provider, except as set out below, provided the appliance is installed and used strictly in accordance with the written instructions supplied, and that the failure is not due to accident, misuse, abuse, unsuitable water conditions, or to any alteration, modification or repair by any party not expressly nominated by Birko.

No costs are payable by the customer other than any mileage or travelling-time charges incurred by a Birko Service Provider or the cost of removal, cartage and re-installation of any component of the appliance if it needs to be returned for repair to Birko or its Distributor.

This warranty does not cover damage resulting from non-operation of the appliance or consequential damage to any other goods, furnishings or property.

Furthermore, this warranty does not displace any statutory warranty, but, to the extent to which Birko is entitled to do so, the liability of Birko under any statutory warranty will be limited at Birko's option to the replacement of the appliance or supply of equivalent appliance, the payment of the cost of replacing the appliance or acquiring an equivalent appliance, or the payment of the cost of having the appliance repaired or the repair of the appliance.

Registering Your Purchase

Registering your purchase on the Birko website may help to establish date of purchase should it become necessary to service the appliance under terms of the Birko warranty. To register your installation go to www.birkoheaters.com and look under the heading "Warranty".



Birko Heaters Australia Pty Ltd
ABN 39 103 881 625
32 Baker Street Richmond VIC 3121 Australia
Telephone +61 3 9428 4519
Facsimile +61 3 9428 9215
sales@birkoheaters.com
www.birkoheaters.com

The term 'Birko' is a registered trade mark of Birko Heaters Australia Pty Ltd

June 2003 Publication 601004

birko